

P-Life America Latina P-Life[™] Biodegradable Plastic Technology

ANALYSIS REPORT

General information	
	Date: August 7, 2015.
Analysis number:	Q-090715F130
Client:	Ecoventur
Analysis period:	09-07-2015/07-08-2015
Test Description:	Accelerated Photodegradation
I Sample Description:	
	A.5. Rafia Client: TEXTIL OESTE P-life 1% SMC PP Rafia With 6% of Calcium Carbonate
-	pased on temperature of the structure and determination of its o; "Tensile Test" ASTM D3826-98, "Standard Practice for Exposure cs" ASTM D5208.
III Laboratory equipment	
a) Universal Testing N	lachine. eathering tester. Cycle: Continues of UV at 50°C and 0.70 W/m2.




$\begin{array}{l} P\text{-Life America Latina}\\ P\text{-Life}^{^{TM}} & Biodegradable \ Plastic \ Technology \end{array}$

IV.- <u>Results:</u>

MECHANICAL PROPERTIES

For this study we decided to analyze the results of the maximum force supported because it was the most significant data.

	Maximum Force Supported (Newton)	
Days in the oven	M1	
0	242.83	
3	227.31	
5	209.54	
7	189.54	
9	121.38	
11	84.72	
13	73.63	
15	54.92	
17	18.66	
20	4.73	

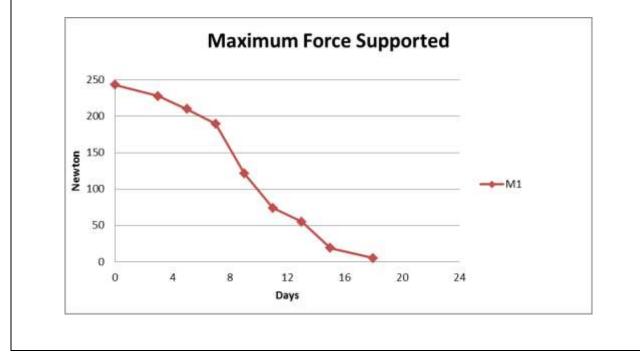


Guadalajara, Jalisco, México

info@plifela.com



QUALITATIVE ANALYSIS

		Sample
		M1
Stage		Days
		0
1	The sample enters to study.	
		9
2	Maintains Physical Properties.	
	The structure changes his initial	11
3	properties (color, hardness)	
		17
4	The product is broken easily.	
	The degradation process has	20
5	finished.	

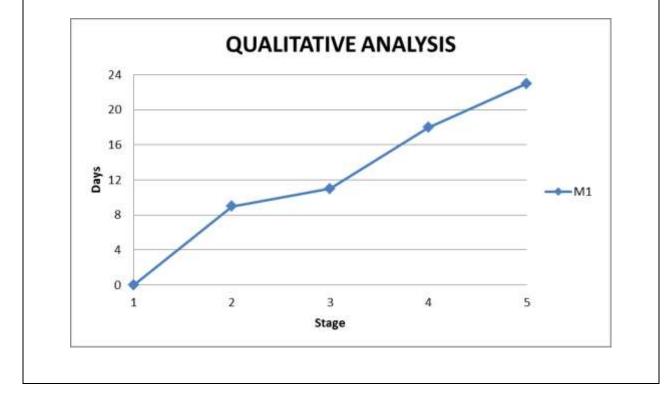

Guadalajara, Jalisco, México

info@plifela.com



P-Life America Latina P-LifeTM Biodegradable Plastic Technology

V.- Conclusions:

After exposing the sample to the accelerated aging process, the change in mechanical and physical properties were also clearly observed.

It is considered that the period of useful life ends by losing more than 50% of the initial force supported, that took place after 11 days of exposure. Therefore, it is determined that a shelf life of Sample M1 is considered to be 27 months (2 years with 3 months) under 30°C warehouse environment.

Based on ASTM D5510-94 is considered that the sample has reached its accelerated degradation, when it support less than 5% of force that happened after 20 days of study therefore we concluded that this sample has a **degradation time of 50 months (4 years with 2 months).**

Please be advised that 1 day of study shall be converted into 2.5 months under 30°C environment. The conversion rate is calculated based on Arrhenius Activation Energy.

Please be also advised that the determination of shelf life time as 50% retained property is based on our long term experiences we have been conducting a degradation test for a number of customers throughout the worldwide region.

Ing. Martha Castillo Cruz

Guadalajara, Jalisco, México

info@plifela.com



P-Life America Latina P-Life[™] Biodegradable Plastic Technology

ANNEX IMAGE



Illustration 1. Laboratory equipment



Illustration 2. Sample M1 in the universal machine before the study began.

Guadalajara, Jalisco, México



 $\begin{array}{l} P\text{-Life America Latina}\\ P\text{-Life}^{\text{TM}} & Biodegradable \ Plastic \ Technology \end{array}$



Illustration 3. Sample M1 after 7 days of study.



Illustration 4. Sample M1 after 13 days of study

6



P-Life America Latina P-LifeTM Biodegradable Plastic Technology



Illustration 5. Sample M1 after 15 days of study



Illustration 6. Sample M1 after 17 days of study



Illustration 7. Sample M1 after 20 days of study

7